

## TILE FRAME



Invisible inspection door.

Type	Order Nr.	Dimensions (mm)				
	green	a	b	c	d	h
DPO 200 x 200	107	204	204	240	240	11
DPO 200 x 250	106	204	254	240	290	11
DPO 300 x 300	105	306	306	344	344	11

Colour: green.

**Mounting instruction:** mount the frame for example with silicon, place tile on the cover of inspection door and place it easily in the frame

**How to open:** The emergency opening can easily be found by knocking on the tiles. Remove the grout from around the frame and suck out the tile board using a vacuum cleaner.

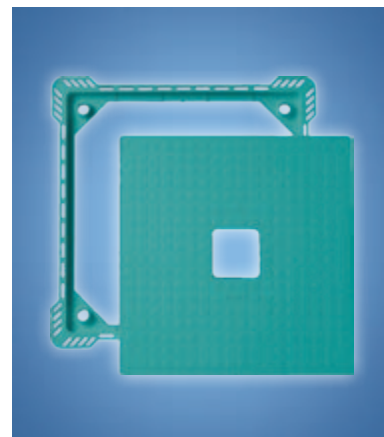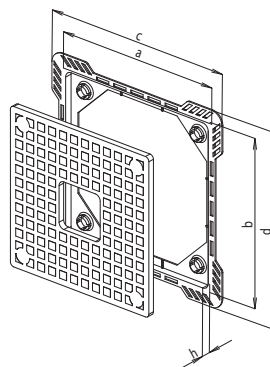


## REVISION DOORS

Simple and esthetic revision doors. Easy instalation.

Type	Order Nr.	Dimensions (mm)				
	white	a	b	c	d	h
D 150 x 150	104	148	148	164	164	19
D 150 x 200	110	148	198	164	214	19
D 200 x 200	103	198	198	216	216	24
D 200 x 250	108	198	248	218	268	24
D 200 x 300	102	198	298	218	318	24
D 300 x 300	101	298	298	318	318	24
D 300 x 400	109	298	398	321	421	24

Colour: white.

**Installation:** open the door and take out of the frame, mount the frame into the hole, let the frame harden and place the door into the frame.

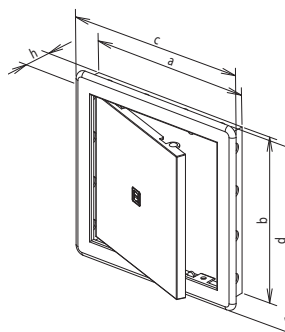

## REVISION DOORS — BIG




Robust inspection door. Possible to lock.

Type	Order Nr.		Dimensions (mm)				
	white	grey	a	b	c	d	h
RD 400 x 400	111	112	397	397	430	430	40
RD 400 x 400 Z	113	114	397	397	430	430	40
RD 400 x 600	115	116	397	597	430	630	40
RD 400 x 600 Z	117	118	397	597	430	630	40
RD 600 x 600	119	-	597	597	630	630	40
RD 600 x 600 Z	120	-	597	597	630	630	40

Colour: white, grey.

**Installation:** 1 – Mount the frame into the hole. 2 – Place the door into the frame. 3 – Open the click-in stop on the maximum and close the door. 4 – Close the click-in stop. Door are available also with lock. A – You can adjust the door by using sliding stop. Or by adjust the click-in stop using the imbuss – B.

Z – revision door with lock.

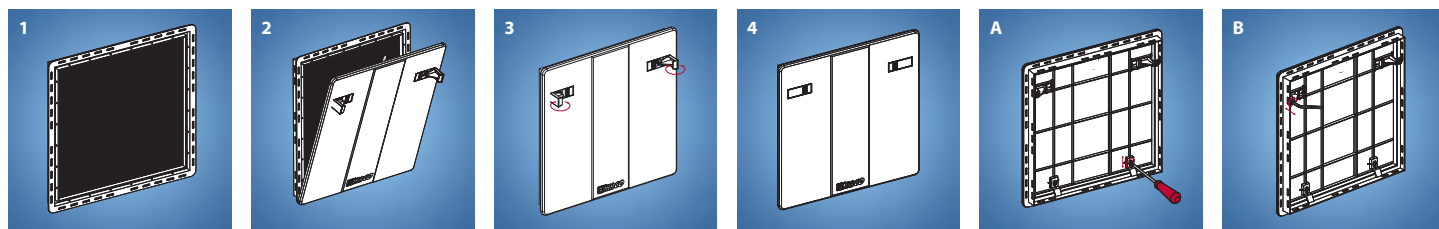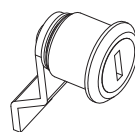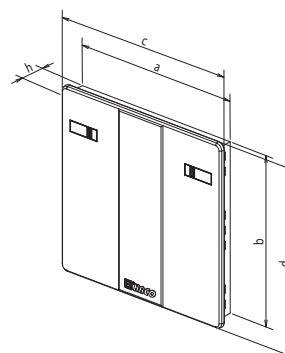

Patented

**STABIL**  
Material is high quality plastic — UV Stabil. Products do not get yellow.



**Notice:** do not clean with acetone, trichlorethylene etc., you can damage look of the product!



New product. New type marked yellow.



**WHITE / GREY**  
Colors of revision doors.



EUROPEAN UNION  
EUROPEAN REGIONAL DEVELOPMENT FUND  
INVESTMENT IN YOUR FUTURE